



arlo™

Arlo Pro Rechargeable Battery
Quick Start Guide



What's Included



Rechargeable battery



Window decal



Camera power adapter cable



Camera power adapter

Insert the Battery

1. Unlock the battery compartment by pressing and holding the latch.



2. Gently pull the battery door back to open the compartment.

3. Align the battery contacts.




4. Insert the battery.
5. Close the battery door.



Charge the Battery

1. Place the camera indoors.
If you are using the camera outside, bring it inside while charging the battery.
2. Connect the power adapter cable to the camera power adapter.

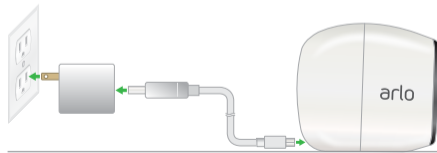

Note: You must use an Arlo Pro power adapter and cable to charge the battery.

3. Connect the other end of the adapter cable to the camera.
4. Plug the power adapter into an electrical outlet.

The camera LED lights solid blue when the camera battery is fully charged.



You're Done!

Congratulations! Your Arlo Pro camera is set up and ready to go.

To view useful tutorial videos, find troubleshooting tips, or get support, visit support.arlo.com.

©NETGEAR, Inc., NETGEAR, the NETGEAR Logo, and Arlo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

Compliance

For the current EU Declaration of Conformity, visit
http://kb.netgear.com/app/answers/detail/a_id/11621/.

For regulatory compliance information, visit
<http://www.netgear.com/about/regulatory/>.

NETGEAR®

350 East Plumeria Drive
San Jose, CA 95134, USA

October 2016



NETGEAR INTL LTD

Building 3, University Technology Centre
Curraheen Road, Cork, Ireland



201-20611-02