

© Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. Other trademarks are for reference purposes.


For regulatory compliance information including the EU Declaration of Conformity, visit [www.arlo.com/about/regulatory/](http://www.arlo.com/about/regulatory/).



Arlo Technologies Intl. Ltd.  
Ground Floor, Building 3  
University Technology Centre  
Curraheen Road, Cork, T12 EF21  
Ireland

Arlo Technologies, Inc.  
2200 Faraday Avenue, Suite 150  
Carlsbad, CA 92008 USA

 June 2021



201-50311-21



## Set up your Essential Video Doorbell Wired

Your Arlo Essential Video Doorbell Wired requires a wired doorbell and chime with voltage between 16 – 24VAC.

The 24VAC transformer is provided for homes with doorbell systems that use voltages outside this range. If the transformer is required, have it installed by a certified electrician.

1

Find your doorbell, chime box, and the electrical panel at your home.

2

Download the Arlo app from the App Store or Google Play.



3

 
Follow the step by step instructions in the Arlo app to install.




**WARNING: To prevent fire and injury, connect the Arlo Video Doorbell and Power Kit only to voltage between 16 – 24VAC.**

## What's in the box


---

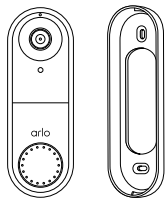

 
Doorbell and plate  
(These parts are attached)



Angled  
mounting  
plate

 


24VAC  
Transformer

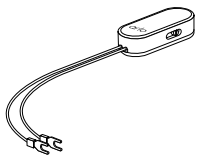 

Power Kit



 Release pin



Wall screws and anchors



Optional wire extensions, wire  
fasteners, and extra screws

## Tools

---

- A Phillips head screwdriver is required to install the doorbell (not provided).
- You might also benefit from having a drill, a level, and a ladder (to reach the chime).

## Need help?

---

We are here for you.

Visit [www.arlo.com/support](http://www.arlo.com/support) for quick answers and:

- How-to videos
- Troubleshooting tips
- Additional support resources