

Safety Rules for Arlo Pro Charging Station

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Arlo Pro Rechargeable Batteries compatible with the Arlo Pro Charging Station. Charging other batteries may cause them to leak, rupture, or explode.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- Do not operate the charging station if it or its cord is damaged.
- Do not disassemble, modify, or attempt to use the charging station as a power source.
- Do not disassemble the battery, dispose of the battery in fire, put the battery in backwards, mix it with used or other battery types, or short circuit the battery. The battery might ignite, explode, leak, or get hot, causing injury.

- Unplug the charging station before maintaining or cleaning it.
- If you are using the charger in countries outside of the United States, connect a NETGEAR approved plug adapter.
- This charging station is not a toy and should not be used by children or infirmed persons without adequate training or supervision.
- This charging station is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the charging station by a person responsible for their safety.

IMPORTANT SAFETY INSTRUCTIONS! SAVE THESE INSTRUCTIONS!

NETGEAR, Inc.

350 East Plumeria Drive
San Jose, CA 95134, USA

August 2016



203-11626-01